

Outdoor Screen

Assembly Instructions (4'x6' & 4'x4')



Tools and hardware included:



Allen
wrench



7/8"
Allen Head
Screws



3/4"
Allen Head
Screws



Washers

1. Lay screen assembly, with attached top and bottom frame pieces, flat on ground.
2. Insert one cord piece into the sleeve on each side of screen.
3. Pinch sleeve with cord into the channel of the side frame piece. Gently slide frame piece onto entire length of screen.
4. Repeat on other side with second side frame piece.
5. With the screen assembly still on ground, connect the top of the side frame piece to the attached top frame. Use two 7/8" Allen head screws and two metal washers per side.*
6. Next use one 7/8" screw and one metal washer per side to attach the side frame pieces to the bottom support frame.
7. Evenly tighten all frame screws.
8. Finally insert the feet, one at a time, and secure using 2 screws and 2 washers per side.



Helpful Tip:

*Consider threading all frame screws part way before fully tightening to help with frame alignment.