


Outdoor Screen

Assembly Instructions

4' x 4'
and
4' x 6'



Tools and hardware included:

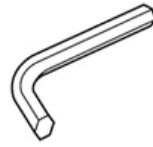

Allen
wrench



Allen Head
Screws



Washers

1. Remove cord from center channel from both side frame pieces.
2. Lay screen assembly, with attached top and bottom frame pieces, flat on ground.
3. Insert one cord piece into the sleeve on each side of screen.
4. Pinch sleeve with cord into the channel of the side frame piece. Gently slide frame piece onto entire length of screen.
5. Repeat on other side with second side frame piece.
6. With the screen assembly still on ground, connect the top of the side frame piece to the attached top frame. Use 2 Allen head screws and 2 washers per side.
7. Next use 1 screw and 1 washer per side to attach the side frame pieces to the bottom support frame.
8. Finally insert the feet, one at a time, and secure using 2 screws and 2 washers per side.