

VP6 Rolling Economical Partition Assembly Instructions




Hardware included:




Screws

1.

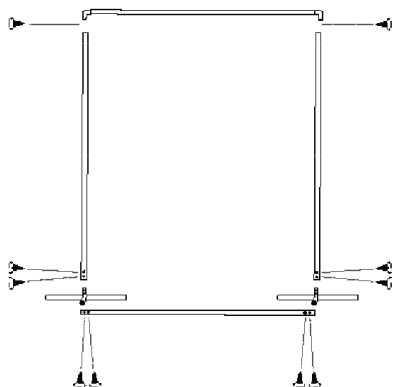

Layout poles in correct shape and screw in bolts to connect the poles together with the screws provided.

2.

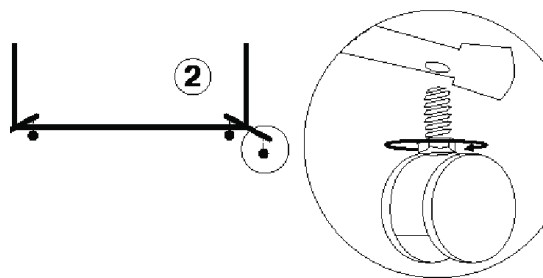


Screw in wheels to the bottom of frame.



VERSARE


Versare Solutions, LLC
3236 California St. NE • Minneapolis, MN 55418
1-855-457-1473 • customerservice@versare.com

1.

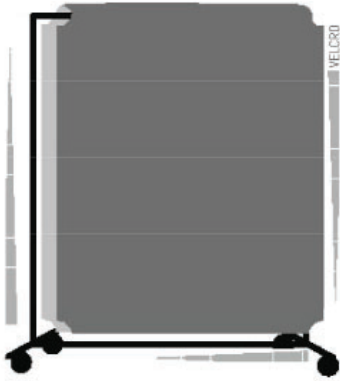

Add the canvas exterior using velcro attachments around poles.

2.

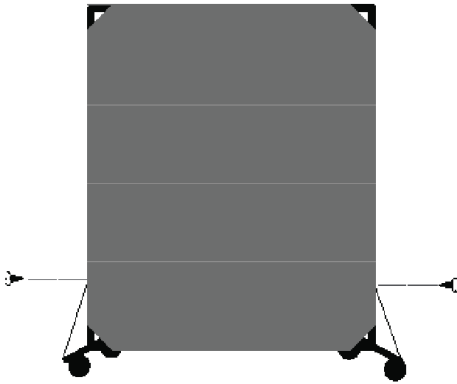

Screw in the wheels to the bottom of the panel.

Assembly complete!
We hope you enjoy your new VP6!

For questions regarding your VP6 please contact us at
1-855-457-1473 or
customerservice@versare.com