


## ClearView Countertop Sneeze Shield Assembly Instructions



Tools and hardware included:

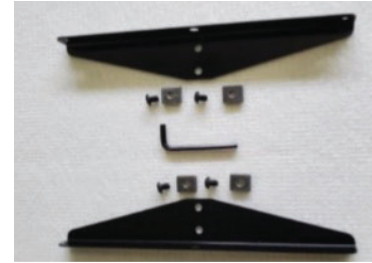

1.



Loosely attach 2 Screws and 2 Square Nuts by hand through the side holes of the first foot. The square nuts should be positioned on the inside angle of the feet.

2.



Align the foot with the post of the side frame and insert, matching the square nuts with the exterior channel.

3.



Position the foot assembly so the buttonhead of the two screws are on the outside of the Countertop Shield and slightly tighten each screw with the included allen wrench, do not fully tighten.

4. Repeat the above steps for the second foot assembly.

5. Once the second foot has been attached, set the Countertop Shield upright. Confirm that the Shield is standing straight and perpendicular, adjust as needed to achieve, then finish tightening all four screws.\*



**VERSARE**

Versare Solutions, LLC  
3236 California St. NE • Minneapolis, MN 55418  
1-855-457-1473 • [customerservice@versare.com](mailto:customerservice@versare.com)



Helpful Tips:

- \* To achieve a semi-permanent mount, your Countertop Shield can be secured to the counter by:
- Appropriate screws and /or anchors matched to the specific counter material. Attach hardware (not included) through the holes in each foot.
  - Using double-sided foam tape (not included) to achieve a secure positioning.

All complete!

We hope you enjoy your new  
ClearView Countertop Sneeze Shield!

If you have any questions on your ClearView Countertop Sneeze  
Shield, please contact us at  
1-855-457-1473 or  
[customerservice@versare.com](mailto:customerservice@versare.com)



**VERSARE**

Versare Solutions, LLC  
3236 California St. NE • Minneapolis, MN 55418  
1-855-457-1473 • [customerservice@versare.com](mailto:customerservice@versare.com)

100025 REV B