

MediPanel Countertop Screen

Assembly Instructions




Tools and hardware included:



Feet



Button
Head
Screws

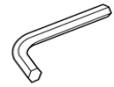


Allen Wrench

1.



Prepare components by attaching a foot to first foot bar with two button head screws and Allen Wrench provided. Then set the Countertop Panel upright on the work surface.

2.

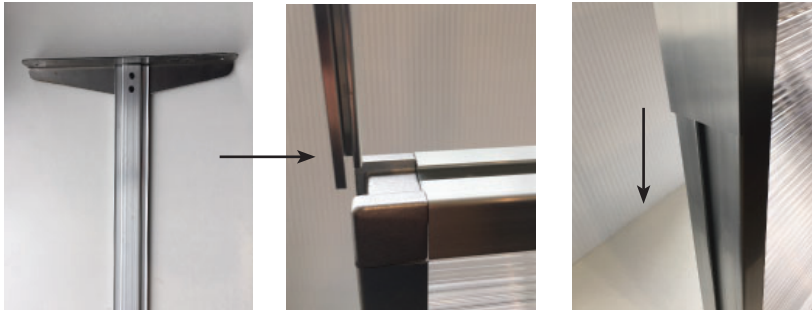

Turn foot bar upside down and slide first bar into the channel on the side of the panel. Do this from the top, sliding the bar all the way down.

3.



Attach a button screw into the side bar and fully tighten with the included Allen Wrench. Doing this will allow the screw to bite into the frame.

4. Repeat the above steps for the second foot assembly.



VERSARE

Versare Solutions, LLC
3236 California St. NE • Minneapolis, MN 55418
1-855-457-1473 • customerservice@versare.com

100000 REV B