


MediPanel

Assembly Instructions




Hardware included:

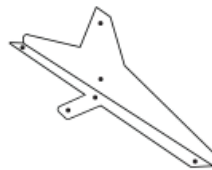

Feet

or

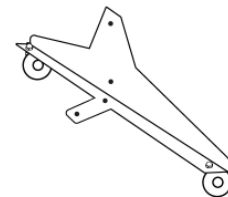

Feet with Wheels

1. Remove window panel and lay flat on the ground. If there is a film covering, remove before proceeding.*

2.



Attach the foot assembly by sliding it on open section of channel. Repeat for other side.

3. Lift your Floor Screen Panel up in to position.

Assembly complete! We hope you enjoy your new MediPanel!

For questions regarding your MediPanel please contact us at
1-855-457-1473 or
customerservice@versare.com



Helpful Tips:

- * Pull film from frame edge in small sections at a time. You can also carefully cut the film, with a box cutter, along the frame and peel it from the window panel material.