



# QUICKWALL® FOLDING PORTABLE PARTITION ASSEMBLY INSTRUCTIONS

## STEP 1.

Remove two bolts from the outside-bottom edge of each outer panel with the included Allen key and one screw from the side of each outer panel with a Phillips screwdriver (not included).

## STEP 2.

Attach the foot base with the three washers first (against the bottom edge of the panel), then the bolt. Repeat for the other set of washers and bolt.

## STEP 3.

Attach the screw.



## STEP 4.

Repeat Step 2 and Step 3 for the other side of the divider and foot base.

**HARDWARE INCLUDED:**

- (COUNT: 2) Feet with Wheels 
- (COUNT: 2) Screws 
- (COUNT: 4) Button Bolts 
- (COUNT: 12) Washers 
- (COUNT: 1) Allen Key 

Questions or concerns?  
Please contact us at 1.855.960.6020  
or email [customerservice@versare.com](mailto:customerservice@versare.com)

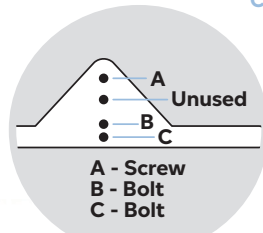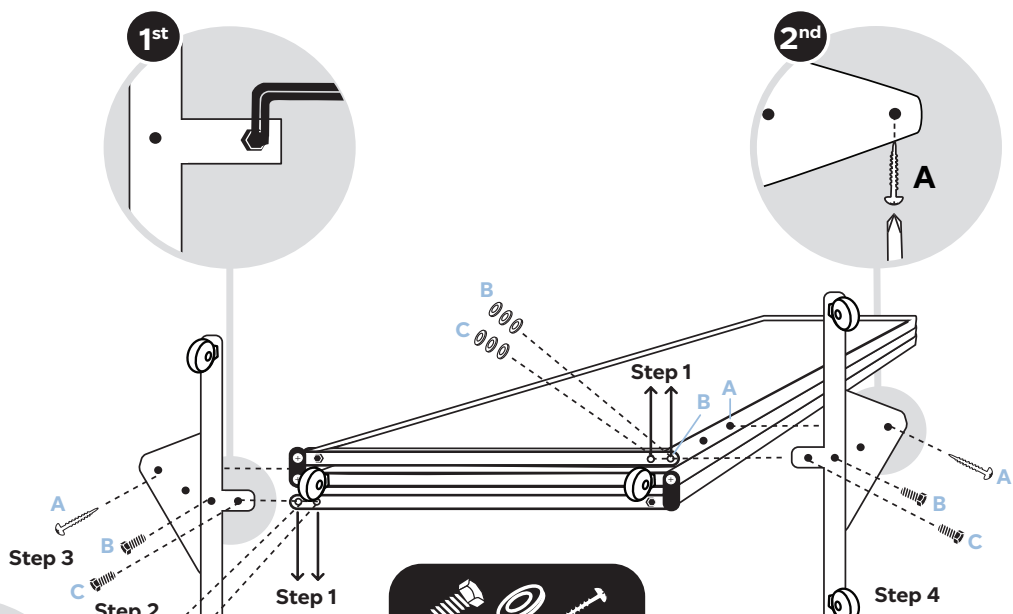

**Important:**  
All bolts, washers, & screws must be reinserted in feet brackets for proper use.

