

Work Station Screen

Assembly Instructions



Tools and hardware included:



Feet




Screws



Bolts

1.

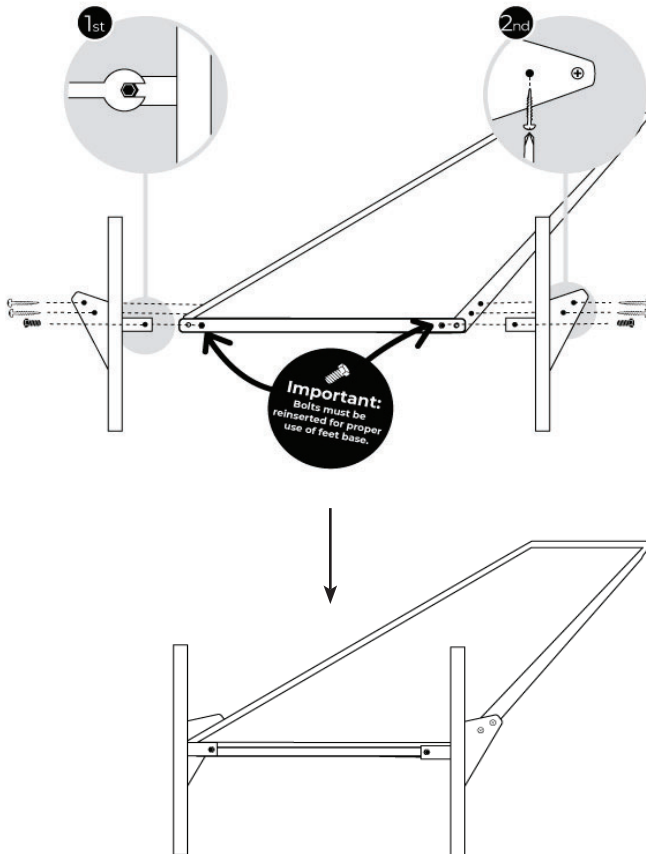

Remove two bolts. Then attach feet base with **bolts first**, screws second.

Assembly complete!
We hope you enjoy your new Work Station!

For questions regarding your Work Station please contact us at
1-855-457-1473 or
customerservice@versare.com