


# Room Divider 360

## Assembly Instructions

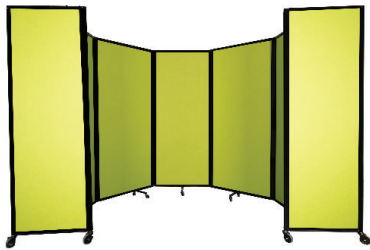

Tools and hardware included:



Small Bolt



Large Bolt




Medium Bolt




2 Allen Wrenches

1.

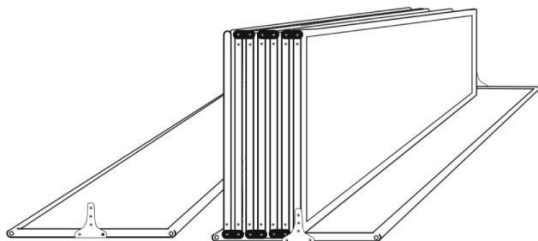

Gently place both end panels on the ground and lift partition bundle (placing it on its side) on top of one of the end panels.\*

2.

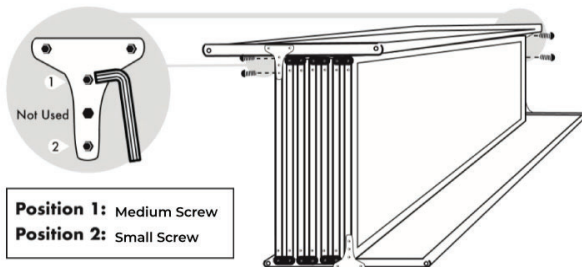


Line up bracket on end panel to the holes on the outside piece of panel bundle. Screw two bolts into each bracket on the end of the panels as shown.

For 3 and 5 panel Room Divider 360 single wheels will already be screwed into panels. For 7 and 9 panel Room Divider 360 Follow the next two steps to install wheel bars.




Helpful Tip: \*Keep shipping straps buckled for easier assembly.

3.

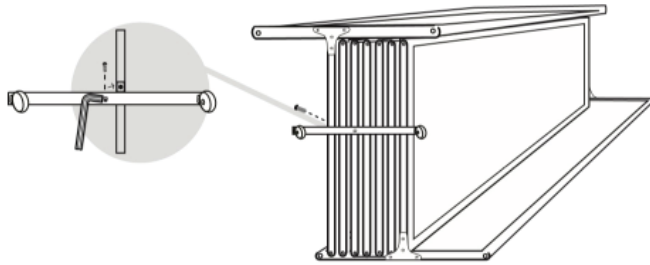


Screw wheel base to bottom of panels into square nuts. Image shows approximate placement. The bottom of panels are predrilled. Slide square nut to this location. Attach wheel assembly with large screw using allen wrench. Keep pressure on wheel bar will help to maintain perpendicular placement.

4.

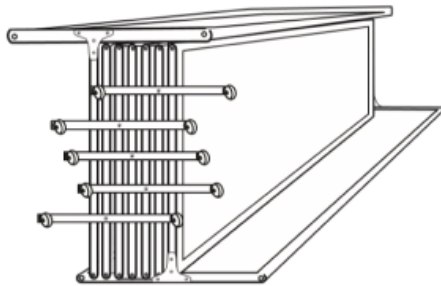

Repeat this process for all wheel bars.

5.

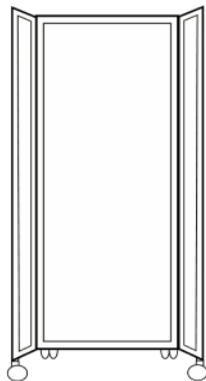

Set any adjustable wheels into locked position. Gently lift partition onto it's base & enjoy!

Assembly complete!  
We hope you enjoy your new Room Divider 360!

For questions regarding your Room Divider 360 please contact us at  
1-855-457-1473 or  
[customerservice@versare.com](mailto:customerservice@versare.com)