

Countertop Panel

Assembly Instructions



Tools and hardware included:






1.



Set the Countertop Panel upright.

2.

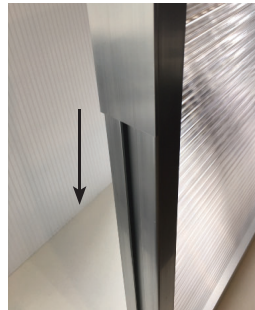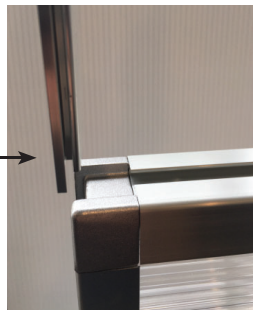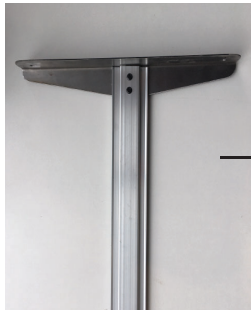

Turn foot bar upside down and slide first bar into the channel on the side of the panel. Do this from the top, sliding the bar all the way down.

3.



Attach the included set screw into the side bar and fully tighten with the included allen wrench. Doing this will allow the screw to bite into the frame.

4. Repeat the above steps for the second foot assembly.