



# SOUND STONES

(WALL)

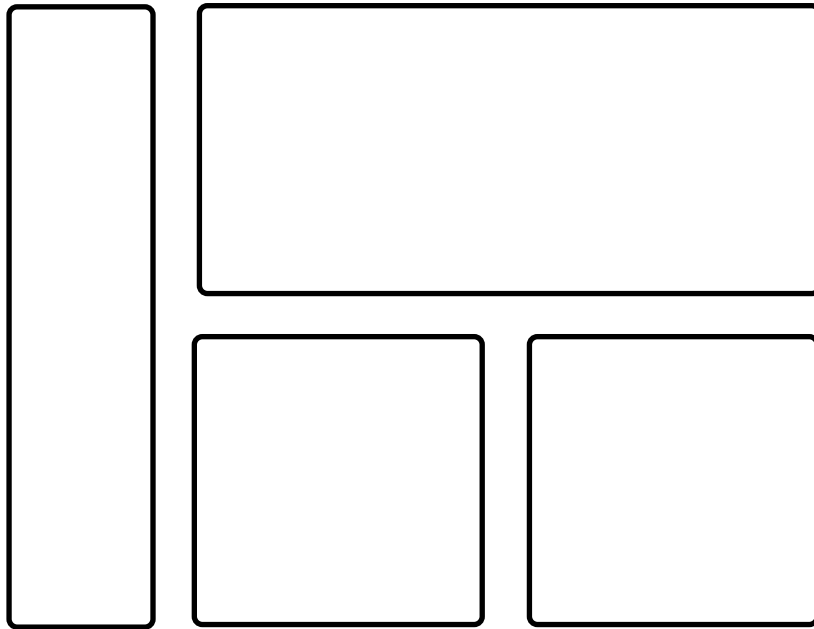

1

FLIP YOUR SOUND STONE (WALL) TO EXPOSE THE BACKSIDE.  
REMOVE PLASTIC COVER FROM EACH ADHESIVE STRIP.

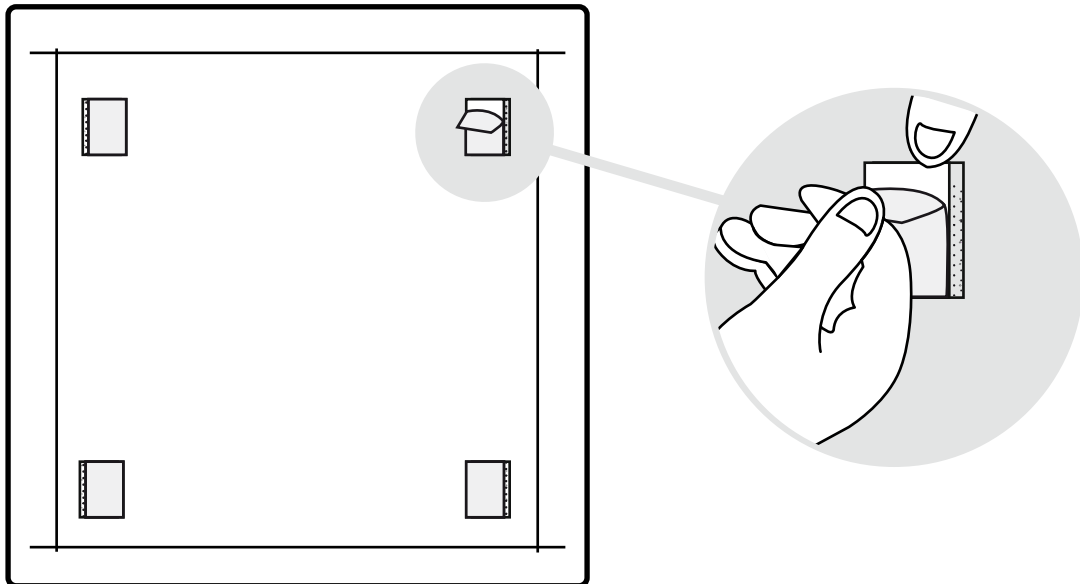








P: 1.800.830.0210  
F: 1.800.310.4874

**VERSARE**  
www.versare.com

3236 California St. NE  
Minneapolis, MN 55418

2

STICK UNIT TO THE WALL OF YOUR CHOICE. ALLOW 60 MINUTES FOR THE STRIPS TO BOND WITH THE WALL.

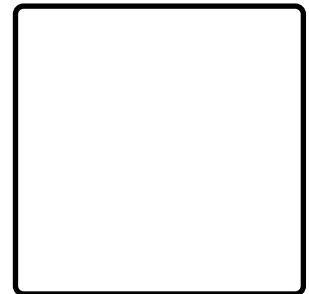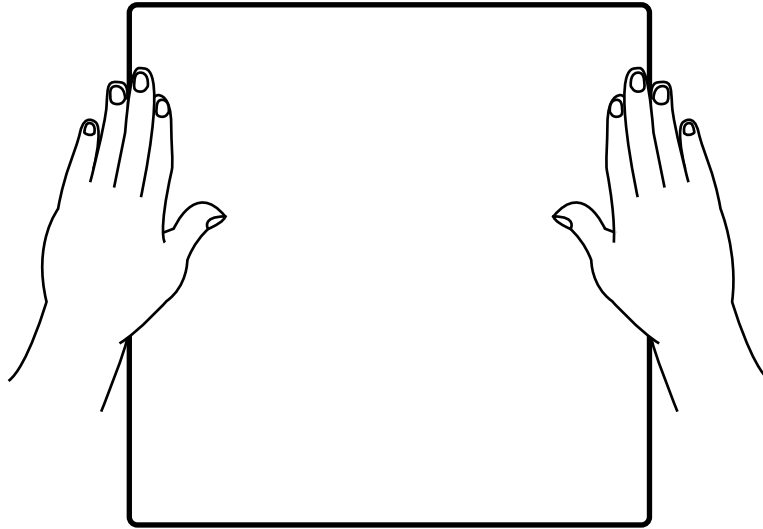

P: 1.800.830.0210  
F: 1.800.310.4874

**VERSARE**  
www.versare.com

3236 California St. NE  
Minneapolis, MN 55418